



INSTRUCTIONS FOR  
**LOW LEVEL CREEPER SEAT**  
MODEL NO: **SCR85**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual

### 1. SAFETY

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this creeper.
- Locate creeper in a suitable working area.
- WARNING!** Use creeper on level and solid ground, preferably concrete.
- Keep the creeper clean and tidy in accordance with good workshop practice.
- DO NOT** use the creeper for any purpose other than that for which it is designed.
- DO NOT** stand on the creeper.
- DO NOT** get the creeper wet or use in damp or wet locations or areas where there is condensation.
- DO NOT** clean the creeper with any solvents which may damage the paint surface or padded areas.

### 2. INTRODUCTION



Heavy duty steel framework with powder coated finish. Creeper seat ideal for prolonged low level jobs. Easy rolling Ø70mm composite swivel castors. Features vinyl covered seat pad and adjustable backrest for added comfort.

### 3. SPECIFICATION

Model no: .....SCR85  
Seat height: ..... 150mm  
Overall size (W x D x H): ..... 730 x 320 x 610mm

### 4. ASSEMBLY

- 4.1. Fit seat base to cross members using 3 screws on each.
- 4.2. Fit castors to end of each of cross member. Locate braked castors at front of creeper.
- 4.3. Insert seat backrest/extension to desired position. Either vertical as a seat backrest or horizontal as the extension for creeper, see fig.2. Secure with pin, see fig.1.
- 4.4. Seat backrest height is adjustable. Remove pin, see fig.1 and adjust to desired position.

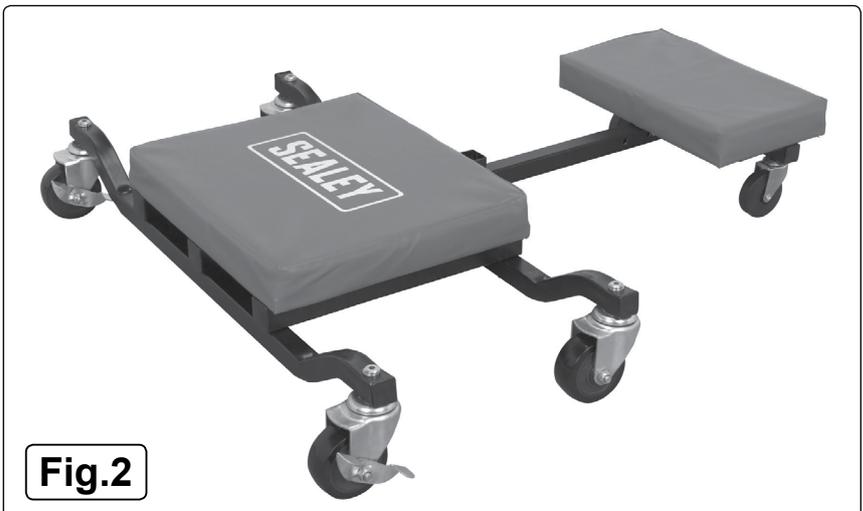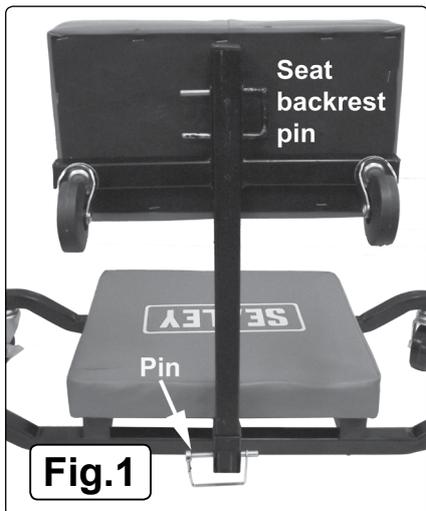



#### **Environmental Protection**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.



Sole UK Distributor, Sealey Group.  
Kempson Way, Suffolk Business Park,  
Bury St. Edmunds, Suffolk.  
IP32 7AR



01284 757500



01284 703534



[www.sealey.co.uk](http://www.sealey.co.uk)



[sales@sealey.co.uk](mailto:sales@sealey.co.uk)