



PNEUMATIC CREEPER STOOL WITH ADJUSTABLE HEIGHT SWIVEL SEAT & BACK REST

MODEL NO: **SCR02B**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions

1. SAFETY

- WARNING!** Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this seat.
- WARNING!** Use the seat on level and solid ground, preferably concrete.
- ✓ Locate seat in a suitable working area.
- ✓ Keep the seat clean and tidy in accordance with good workshop practice.
- ✗ **DO NOT** use the seat for any purpose other than that for which it is designed.
- ✗ **DO NOT** stand on the seat.
- ✗ **DO NOT** use the seat outdoors.
- ✗ **DO NOT** get the seat wet or use in damp or wet locations or areas where there is condensation.
- ✗ **DO NOT** clean the seat with any solvents which may damage the paint surface or the protective coating on the padded seat.
- ✗ **DO NOT** exceed maximum capacity of 150kg.

2. INTRODUCTION

Four legged heavy-duty steel construction with a black powder coat finish for corrosion resistance. Strengthening ring and mesh insert for stability, also acts as a foot rest. Ø410mm Swivel seat features pneumatic height adjustment (510 to 650mm), rotates fully through 360° and is padded with back rest for extra comfort.

3. SPECIFICATION

Model No.:..... **SCR02B**
 Capacity 150kg
 Height(s) 510-650mm

4. ASSEMBLY

- 4.1. Unpack all parts before disposing of packaging material according to local recycling regulations.
- 4.2. Invert frame and fit the castors to the leg bases. Note the location of the two locking castors (fig.1).
- 4.3. Insert gas strut into base frame
- 4.4. Place seat onto gas strut.

5. OPERATION

- 5.1. Once the stool is assembled, compress the height adjustment lever whilst the seat is unloaded. This will allow the seat to reach its maximum height.
- 5.2. To adjust the height, pull the lever slowly whilst sitting on the seat. Release the lever when at the desired height.

6. MAINTENANCE

- 6.1. If in constant use, check the tightness of all fixings on a weekly basis.
- 6.2. The castor wheels are maintenance free; ensure they are always able to rotate and swivel freely.
- 6.3. Clean the seat cushion and trays with a moist cloth and mild detergent.





ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk