

# SEALEY

## 1.2/2.4KW CERAMIC HEATER - 110V

MODEL NO: CH30110V

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
instruction  
manual



Warning!  
Hot surface



**DO NOT**  
cover



Indoor use only




Warning!  
Electricity

### 1. SAFETY

#### 1.1. ELECTRICAL SAFETY

- WARNING!** It is the user's responsibility to check the following:
- ✓ Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage.
- ✓ Sealey recommend that an RCD (Residual Current Device) is used with all electrical products.
- ✓ If the heater is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.
- ✓ Electrical safety information, it is important that the following information is read and understood.
- ✓ Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- ✓ Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.
- ✓ Ensure that the voltage rating on the appliance suits the power supply to be used.
- \* **DO NOT** pull or carry the appliance by the power cable.
- \* **DO NOT** pull the plug from the socket by the cable.
- \* **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.
- ✓ This product is fitted with a EN 60309 (110volt 32amp) plug.
- ✓ If the cable or plug is damaged during use, switch the electricity supply and remove from use.
- ✓ Replace a damaged plug with a EN 60309 (110volt 32amp) plug. If in doubt contact a qualified electrician.
  - A) Connect the GREEN/YELLOW earth wire to the earth terminal 'E'.
  - B) Connect the BROWN live wire to the live terminal 'L'.
  - C) Connect the BLUE neutral wire to the neutral terminal 'N'.
- ✓ Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.
- ✓ Sealey recommend that repairs are carried out by a qualified electrician.

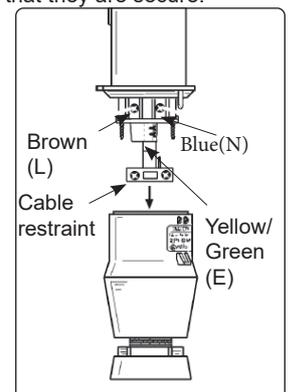

#### 1.2. GENERAL SAFETY

- WARNING!** Some parts of this product can become very hot and cause burns. Particular attention has to be given to where children and vulnerable children are present.
- WARNING!** To reduce the risk of fire, keep textiles, curtains or any other flammable material a minimum distance of 2m from the air outlet.
- WARNING!** Disconnect the heater from the mains power supply before carrying out any servicing or maintenance.
- ✓ Maintain the heater in good order and clean condition for best and safest performance. Replace or repair damaged parts.
- ✓ Locate heater in a suitable work area and keep area clean, tidy and free from unrelated materials. Ensure there is adequate lighting and keep the immediate area in front of the outlet grille clear.
- ✓ Allow the unit to cool before storage. When not in use, disconnect from the mains power supply and store in a safe, cool, dry, childproof area.
- ✓ Use this heater on a horizontal and stable surface.
- \* **DO NOT** use the heater where there are flammable liquids, solids or gases such as petrol, solvents, aerosols etc, or where heat sensitive materials may be stored.
- \* **DO NOT** place the heater near items that may be damaged by heat, allow at least 2m clearance in front of the heater.
- \* **DO NOT** allow the heater to get wet as this may cause an electric shock, causing damage to the heater and possible personal injury.
- \* **DO NOT** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- \* **DO NOT** let power lead hang over an edge (i.e. table), or touch a hot surface, lie in the beam of heat, or run under a carpet.
- \* **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- \* **DO NOT** operate the heater when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- \* **DO NOT** insert or allow objects to enter any openings of heater as this may cause an electric shock, fire or damage to heater.
- \* **DO NOT** use heater if the power cord, plug or the heater is damaged, or if the heater has become wet.
- \* **DO NOT** use the heater for any purpose other than for which it is designed.
- \* **WARNING! If a fuse blows, ensure it is replaced with an identical fuse type and rating.**
- WARNING! If supply trips at consumer unit, ensure correct rating of supply and appliance. If further tripping occurs consult a qualified electrician.**
- \* **DO NOT** use the heater with a programmer, timer or any other device that switches the heater on automatically.

- ✗ **DO NOT** touch the lamps, even when cold.
- ✗ **DO NOT** use the heater without the wheels fitted and locked.
- ✗ **DO NOT** allow children to touch or to operate the heater.
- ✗ **DO NOT** locate the heater below an electrical socket outlet.
- ✗ **DO NOT** use the heater without the grille fitted.
- ✗ **DO NOT** use the heater out of doors. These heaters are designed for indoor use only.
- ✗ **DO NOT** use this heater if it has been dropped.
- ✗ **DO NOT** use if there are visible signs of damage to the heater.
- ✗ **DO NOT** cover heater when in use, and do not obstruct the air inlet and outlet grilles.
- ✗ **DO NOT** place heater too close to yourself or any object, allow the air to circulate freely.
- ✗ **DO NOT** touch the outlet grille of the heater during and immediately after use as it will be hot.
- ✓ Children of less than 3 years should be kept away unless continuously supervised.
- ✓ Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years to less than 8 shall not plug in, regulate and clean the appliance or perform user maintenance.
- ✓ This appliance can be used by children aged from 8 years and above and persons with physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision

## 2. INTRODUCTION

Portable powder coated metal construction. Adjustable thermostat control (15°C – 45°C). Soft-touch control panel with LED display. Programmable 7-day timer function. Equipped with a tilt cut-out switch for added safety. Two ceramic heating elements provide instant heat when required. Polished reflectors maximize heat emission. Carry handle allows for safe movement whilst in use. Sturdy legs provide a secure base. Supplied with 1.5m cable fitted with 32A/110V plug.

## 3. SPECIFICATION

Model No:.....**CH30110V**  
 Dimensions (W x D x H):.....395 x 387 x 668mm  
 Plug Type:..... Yellow - 32A-2P+E  
 Power:.....1200/2400W  
 Supply:.....110V - 32A

## 4. OPERATION

- ❑ **WARNING! Ensure you read, understand and apply the safety instructions in Section 1 before using the heater.**  
**NOTE:** The ceramic element is fragile and therefore it is important that it is not subjected to any unnecessary shocks or vibration and is not moved when it is on or until cooled down.
- ❑ **WARNING!** During relocation the heater should be switched off and disconnected from the power supply. Ensure the heater is at least 2m from any object.
- ❑ **WARNING! DO NOT** touch the top of the heater when in use as it becomes hot.
- ❑ **WARNING!** Always allow elements to cool before moving the units. Use only on a smooth even surface. Failure to do so will cause premature wear to the elements and reduce their working life.
- ❑ **WARNING! DO NOT** use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

### 4.1. REFER TO FIG.1 FOR OPERATION

### 4.2. TILT SWITCH SAFETY MECHANISM

4.2.1. The heater has a built in tilt switch safety mechanism that switches off the unit if it is tilted beyond 25° either forwards or backwards. This prevents fire in the event of the unit being knocked over.

4.2.2. The heater requires manual input to restart e.g. it does not restart automatically.

### 4.3. POSITIONING THE HEATER

4.3.1. Place the heater on a level floor in the area you require to heat.

4.3.2. Allow a minimum of 2m between the heater and adjacent objects.

### 4.4. POWER ON/OFF

4.4.1. Connect to mains supply and turn on the red rocker switch (fig.1.2).

4.4.2. The heater in standby screen shows 'OF'.

4.4.3. Press ON/OFF to start heater. The screen shows: week, time, ambient temperature and power indication.

4.4.4. Press ON/OFF again to turn the heater off. The screen returns to the standby screen and displays 'OF'.

### 4.5. SETTING TEMPERATURE

4.5.1. The default temperature at power on is 30°C.

4.5.2. Press UP/DOWN to set temperature. One press = 1°C. The screen shows temperature only. Range is 15 to 45°C.


4.5.3. After 5 seconds screen defaults to ambient temperature.



4.5.4. The next setting will be based on the previous set temperature.

4.5.5. Heater will only work when ambient is lower than the set temperature.

### 4.6. SETTING POWER

4.6.1. The heater has 3 power settings that can be adjusted by pressing the ELEMENT button.

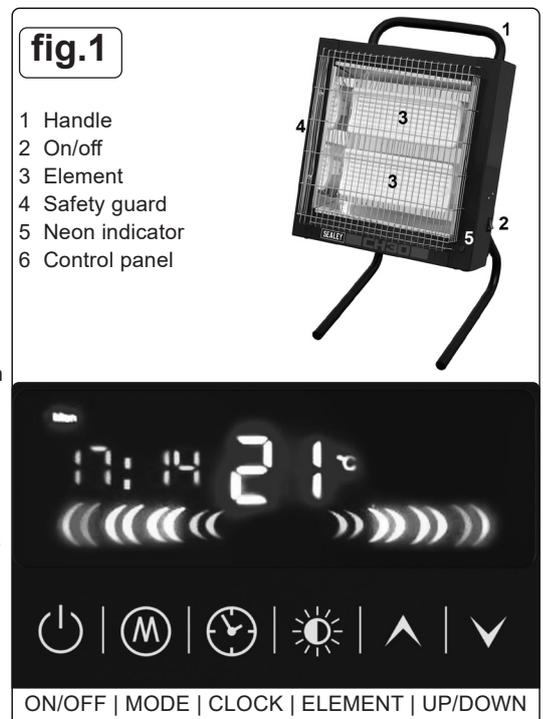

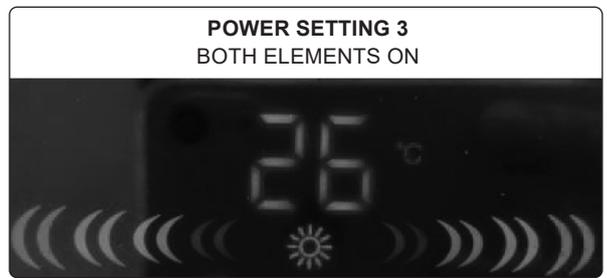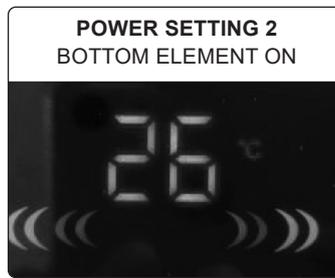

#### 4.7. SETTING CURRENT DATE AND TIME

- 4.7.1. After power on press CLOCK for 3 seconds to set current date and time.
- 4.7.1. When **DAY** symbol (Mon to Sun) flashes, use the UP/DOWN control to select the day.
- 4.7.2. Press CLOCK again and select HOUR using the UP/DOWN control, and again to select MINUTES.
- 4.7.3. Press CLOCK again to save the date and time, or wait 5 seconds without pressing the buttons and selected day and time will be saved.

#### 4.8. SETTING DAYS OF WEEK WORKING TIME MODES

- 4.8.1. Power on. Press CLOCK **once** to set days of the week timer.
- 4.8.2. When **MON** flashes select days of the week by pressing UP/DOWN.
- 4.8.3. The heater has 7 daily programs and 3 working time modes that can be set up within each day.
- 4.8.4. Press CLOCK again and select working time modes 01, 02 03 by pressing UP/DOWN.
- 4.8.5. Press CLOCK again to set the timer for power on (hours first, then minutes) by pressing UP/DOWN.
- 4.8.6. Press CLOCK again to set the timer for power off. Operation is the same as above (selected using UP/DOWN)
- 4.8.7. Then press CLOCK again to set temperature. Default temperature setting is 30°C.
- 4.8.8. Press CLOCK again to finish the timer setting for that day. Repeat the above procedure for other days.
- 4.8.9. Press MODE to activate or deactivate the days of week working time modes. When week and time symbols are both displayed it means the days of week working time mode is active.
- 4.8.10. Repeat above procedures to change weekly working time modes timer.
- 4.8.11. To reset, enter process as far as day selection then press MODE for 3 seconds, all existing set programs for that day will be deleted Users can only reset existing programs day by day.

#### 4.9. OPEN WINDOW DETECTION FUNCTION

- 4.9.1. When ambient temperature drops over 5°C in 10 minutes, the heater will power off automatically and sound 3 alarm beeps.
- 4.9.2. Power on again by pressing ON/OFF.

#### 4.10. NOTES

- 4.10.1. All set programs will be stored even if the power is off.
- 4.10.2. Temperature is only adjustable when the days of week working time modes is inactive.
- 4.10.3. The clock continues to work after power off. Charge battery after 3 hours of initial use (standby and working modes will both charge the battery).

## 5. MAINTENANCE

- ❑ **WARNING!** Disconnect from the mains and allow to cool before moving or attempting any cleaning or maintenance.

#### 5.1. CLEANING & STORAGE

- 5.1.1. Clean the heater and guard with a damp cloth and some mild detergent.
- 5.1.2. Use a vacuum cleaner outside the grille guard to clean dust from heater elements.
- 5.1.3. When not in use, store the heater carefully in a safe, dry, childproof location.
- ✖ **DO NOT** use abrasive cleaners or polishes on casing or guard.
- ✖ **DO NOT** touch the elements unless essential to do so.

#### 5.2. REPLACEMENT PARTS

- 5.2.1. To replace any of the elements, contact your authorised Sealey stockists.
- 5.2.2. Should the power cord require replacement, a complete wiring loom should be purchased and fitted by a suitably qualified person.

#### 5.3. BATTERY REPLACEMENT

- 5.3.1. Refer to Parts Diagram. The battery is located on the lower PCB.
- 5.3.2. It is recommended that this is replaced by a suitable qualified person.



#### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



#### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



REGISTER YOUR PURCHASE HERE

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



sales@sealey.co.uk



www.sealey.co.uk



## Information requirements for electric local space heaters

Model identifier(s): CH30110V.V1					
Item	Symbol	Value	Unit	Item	Unit
<b>Heat output</b>				<b>Type of heat input, for electric storage local space heaters only (select one)</b>	
Nominal heat output	$P_{nom}$	2.4	kW	Manual heat charge control, with integrated thermostat	Yes No <input checked="" type="checkbox"/>
Minimum heat output (indicative)* * Enter figure or NA	$P_{min}$	N/A	kW	Manual heat charge control with room and/or outdoor temperature feedback	Yes No <input checked="" type="checkbox"/>
Maximum continuous heat output	$P_{max,c}$	N/A	kW	Electronic heat charge control with room and/or outdoor temperature feedback	Yes No <input checked="" type="checkbox"/>
				Fan assisted heat output	Yes No <input checked="" type="checkbox"/>
<b>Auxiliary electricity consumption</b>				<b>Type of heat output/room temperature control (select one)</b>	
At nominal heat output	$eI_{max}$	2.340	kW	Single stage heat output and no room temperature control	Yes No <input checked="" type="checkbox"/>
At minimum heat output	$eI_{min}$	N/A	kW	Two or more manual stages, no room temperature control	Yes No <input checked="" type="checkbox"/>
In standby mode	$eI_{SB}$	0.00	kW	With mechanic thermostat room temperature control	Yes No <input checked="" type="checkbox"/>
				With electronic room temperature control	Yes No <input checked="" type="checkbox"/>
				Electronic room temperature control plus day timer	Yes No <input checked="" type="checkbox"/>
				Electronic room temperature control plus week timer	Yes <input checked="" type="checkbox"/> No
				<b>Other control options (multiple selections possible)</b>	
				Room temperature control, with presence detection	Yes No <input checked="" type="checkbox"/>
				Room temperature control, with open window detection	Yes <input checked="" type="checkbox"/> No
				With distance control option	Yes No <input checked="" type="checkbox"/>
				With adaptive start control	Yes No <input checked="" type="checkbox"/>
				With working time limitation	Yes <input checked="" type="checkbox"/> No
				With black bulb sensor	Yes No <input checked="" type="checkbox"/>
Contact details: Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk, IP32 7AR. <a href="http://www.sealey.co.uk">www.sealey.co.uk</a>					
v1					ERP Table 2